











What to do if...
What to do if...

	A tire punctures	P. 629	If you have a flat tire
	The hybrid system does not start	P. 643	If the hybrid system will not start
		P. 124	Immobilizer system
		P. 650	If the vehicle 12-volt battery is discharged
	The shift lever cannot be moved out	P. 645	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 655	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 646	If you lose your keys
	The 12-volt battery runs out	P. 650	If the vehicle 12-volt battery is discharged
	The doors cannot be locked	P. 67	Side doors
		P. 70	Back door
	The horn begins to sound	P. 126	Alarm
	The vehicle is stuck in mud or sand	P. 660	If the vehicle becomes stuck



A warning light or indicator light comes on

P. 598

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 598



Malfunction indicator lamp

or



P. 599



Brake system warning light

P. 599



Driver's seat belt reminder light

P. 601



"ABS" warning light

or



P. 599



Front passenger's seat belt reminder light

P. 601



Master warning light

P. 601



Low fuel level warning light

P. 601



Electric power steering system warning light

P. 599









SRS warning light

P. 599



Pre-collision system warning light*

P. 599

	Open door warning light P. 601		Tire pressure warning light P. 601
	Charging system warning light P. 598		Slip indicator P. 601
	Automatic High Beam indicator light* P. 599		"AFS OFF" indicator* P. 599

*: The light flashes to indicate a malfunction.